

Belt-Way Conveyor Belt Scales for Every Application

Printing Tickets using the **Belt-Way** Ticket Printer

Print in ticket format on demand or automatically log data to the printer at programmed intervals.

OPTION "A": To print ticket format on demand:

From the Belt-Way Controller:

1. Press the F7 Key.
2. Press the SELECT key. The cursor appears on line 1 by RS-232.
3. Press the UP ARROW key to change OFF to TICKETS.
4. Line 1 now reads "RS-232 TICKETS"
5. Press SELECT again. The cursor jumps to line 2 by the word USE
6. Press the UP ARROW on the Keypad to adjust the number of line feeds.
7. Line 2 now reads Use X line Feeds
8. Press F8 to print in ticket.



OPTION B: Log production data to the printer at programmed intervals (from 1 to 255 minute intervals):

From the Belt-Way Controller:

1. Press F7.
2. Press the SELECT key. The cursor appears on line 1 by RS-232
3. Press the UP arrow on the keypad to select WEIGHT, RATE, or WEIGHT and RATE. If you select WEIGHT, only WEIGHT will be printed. If you select RATE, only RATE will be printed. If you select WEIGHT and RATE, both will be printed.
4. Press SELECT key two more times. The cursor jumps to LF after CR.
5. Press the UP arrow key to select BOTH.
6. Press the SELECT key once more. The cursor jumps to the words LOG DATA.
7. Press the UP Arrow Key to select the interval (in minutes) between records.
8. Note – If Log Data OFF is selected in this mode, production data will automatically print one record per second.

